

Ensure that the unit has been switched off and the power supply disconnected.

The filter can be replaced as necessary by releasing the filter assembly from it's seating by pulling gently from the centre of its lower edge (fig.2a). The new filter assembly is replaced by inserting the top edge (fig.2b) and applying pressure on the bottom corners until it clicks into place (fig.2c). Replacement filters are available in packs of 5.

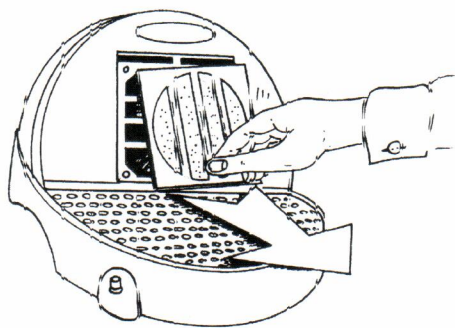


Fig. 2a

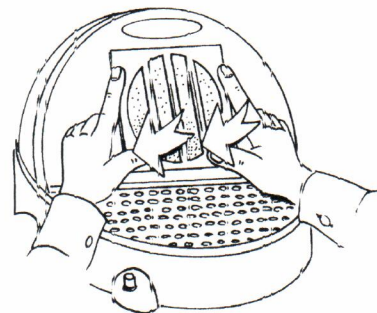


Fig. 2c

